

Attaching the Normally Open (NO) green wire to the positive will result in the 12V accessory working only when the

switch is pressed.

Attaching the Normally Closed (NC) green wire to the positive will result in the 12V accessory being always on, until the switch is pressed.

