
GEAR HUB ASSEMBLY INSTRUCTIONS

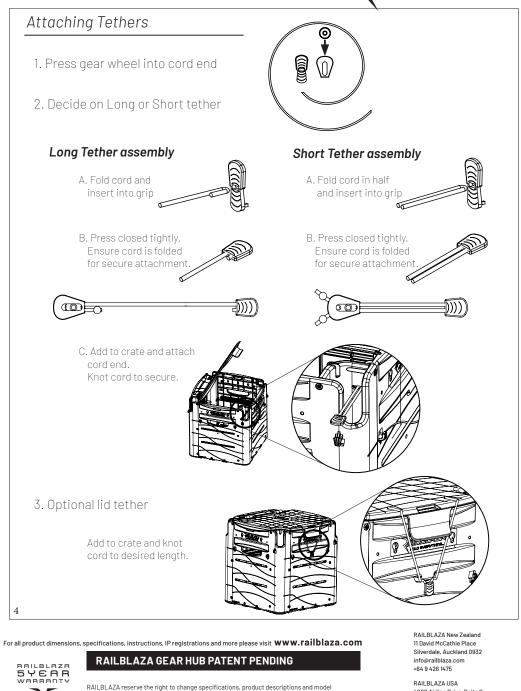

applications at any time without notice and without further obligation. We assume no liability for

any errors in listings, specifications, part numbers or model applications

4000 Airline Drive, Suite C

customer@railblazausa.com

Houston, Texas 77022

GEAR HUB ASSEMBLY INSTRUCTIONS

ZAILBLAZA

Tools required

Number 2 Pozi Screwdriver Number 3 Phillips Screwdriver 10mm spanner (or adjustable spanner)


Caution:

Hand tools are recommended (to reduce the risk of stripping out the plastic). However, we understand there are many screws to fasten. If power tools are used, make sure of the following;

- Use the lowest torque setting
- Use the slowest speed setting
- Never fully tighten via power tools. Turn the screws until they are close to tight and finish with manual screw driver.

Lubrication is recommended for the lid screws to prevent galling/seizing between the screw and nut.


Parts included

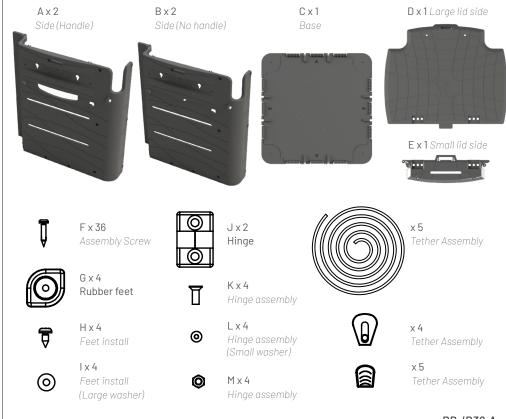

RB-ID39.A

GEAR HUB ASSEMBLY INSTRUCTIONS

ZAILBLAZA

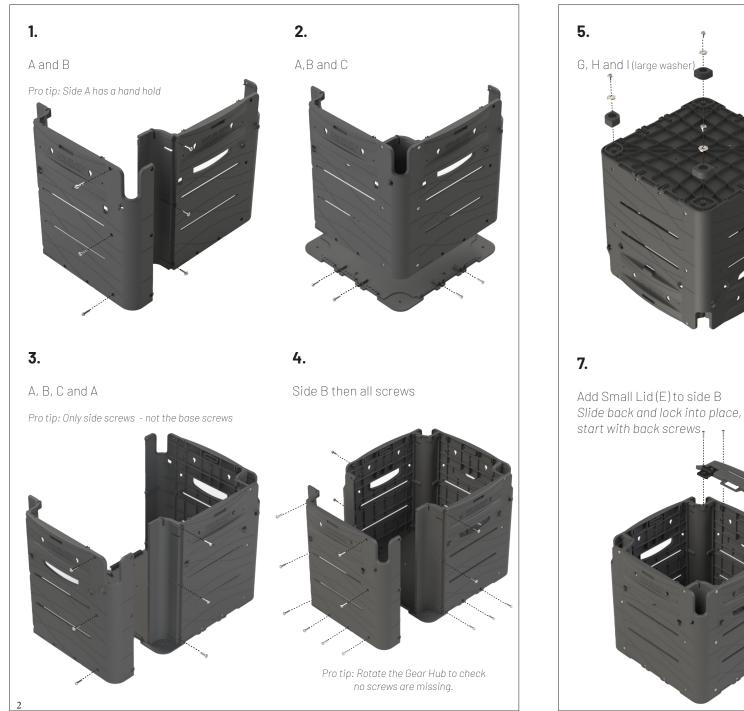

E, J Nylo Reco Lube

6.

E, J, K, L (small washer) and M Nyloc nuts with the plastic ring facing out

Recommendation: Lube screws to avoid galling/seizing.



3