

# GARMIN<sup>®</sup>

## GNA™ 10 JOG LEVER ADAPTER

### INSTALLATION INSTRUCTIONS

#### Important Safety Information

##### ⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

You are responsible for the safe and prudent operation of your vessel. The autopilot is a tool that enhances your capability to operate your boat. It does not relieve you of the responsibility of safely operating your boat. Avoid navigational hazards and never leave the helm unattended.

Always be prepared to promptly regain manual control of your boat.

Learn to operate the autopilot on calm and hazard-free open water.

Use caution when operating the autopilot near hazards in the water, such as docks, pilings, and other boats.

##### ⚠ CAUTION

When in use, beware the risk of entrapment or pinching from moving parts.

Failure to install and maintain this equipment in accordance with these instructions could result in damage or injury.

##### NOTICE

To avoid damage to your boat, the autopilot system should be installed by a qualified marine installer. Specific knowledge of marine steering and electrical systems is required for proper installation.

#### Tools and Supplies Needed

- Wire cutters/strippers
- Waterproof wire connectors (wire nuts) or heat-shrink tubing and a heat gun
- Cable ties
- Jog lever or switch to connect to the system

#### Compatible and Recommended Jog Levers and Other Devices

This device has been tested and confirmed to be compatible with the jog lever models listed below, and complete wiring and configuration details for these models are provided in these instructions. Jog levers from other manufacturers may work with this device when connected and configured using these instructions, but compatibility cannot be guaranteed.

- Jastram™ JO100-1 and JO300-1
- Kobelt™ 7170
- Simrad™ S35

When selecting a switch to use with this device, consider these guidelines.

- A single-pole, single-throw (SPST) switch, either latching or momentary, can be used to trigger actions.
- A switch rated for IEC IP67 is recommended to best withstand installation and use in a marine environment.

When selecting an indicator light to use with this device, consider these guidelines.

- Although both incandescent and LED indicator lights are compatible, an LED indicator is recommended because LED indicator lights last longer and require less power to operate.
- The output signals from this device when using wiring harness A as directed are regulated to 22 mA max. You can use most LED indicator lights without installing a current limiter.
- An indicator light rated for IEC IP67 is recommended to best withstand installation and use in a marine environment.

#### Installing the Adapter

You can use this adapter to connect an external device to the autopilot system, such as a jog lever, a normally open momentary or latching switch, or an indicator light.

**NOTE:** You can install only one jog lever per GNA 10 adapter. If you have multiple jog levers, you must install a separate adapter for each jog lever.

- 1 Mount the external device according to the instructions provided with the device.
- 2 Connect the bare wires from the external device to the GNA 10 adapter (*Wiring Connections, page 1*).
- 3 Repeat the previous two steps for additional external devices, if necessary.
- 4 Connect the GNA 10 adapter to the same NMEA 2000® network as the autopilot system (*NMEA 2000 Connection Considerations, page 2*).
- 5 Configure the behavior of the connected devices in the software (*Configuring the Adapter on a Chartplotter, page 2*).

#### Wiring Connections

You should connect your device or devices using the harness with the A label only. The harness with the B label is reserved for future use.

The wires are organized in pairs, and each input and output channel has both a positive (+) and negative (-) wire. You should always connect your device using both wires in the pair.

If you need to extend these wires, you should use 24 AWG (0.2 mm<sup>2</sup>) wire.

You should use solder and heat-shrink tubing when connecting your device to these wires.



#### Wiring Harness A

Function	Wire Colors
Input 1	Brown (+) Black (-)
Input 2	Yellow (+) Black (-)
Input 3	Blue (+) Black (-)
Output 5	Green (+) Violet (-)



Function	Wire Colors
Output 6	Red (+) Orange (-)
Output 7	White (+) Gray (-)


#### Wiring Harness B (Reserved for Future Use)

Function	Wire Colors
Input 4 (request)	Red (+) Black (-)
Output 8 (acknowledge)	White (+) Green (-)
Drain (ground)	Clear

#### NMEA 2000 Connection Considerations

You must connect the GNA 10 device to the same NMEA 2000 network as the other Garmin® autopilot components.

If you are unfamiliar with NMEA 2000, you should read the *Technical Reference for NMEA 2000 Products* at [garmin.com/manuals/nmea\\_2000](http://garmin.com/manuals/nmea_2000).

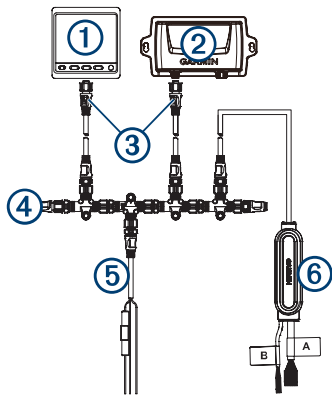

Item	Description
①	Helm control
②	CCU
③	NMEA 2000 drop cable
④	NMEA 2000 terminator
⑤	NMEA 2000 power cable
⑥	GNA 10 device

### Configuration

After connecting the GNA 10 adapter, you must configure it for use with the autopilot system.

You can configure the adapter using a connected helm control or compatible chartplotter.

#### Configuring the Adapter on a Chartplotter

- 1 Select **Settings > Communications > NMEA 2000 Setup > Device List**.
- 2 Select the GNA 10 adapter.
- 3 Select **Review > Configuration**
- 4 Select the input or output channel you want to configure, and select **Set Action**.
- 5 Select an action for the input or output wire (*Adapter Configuration Options, page 2*).
- 6 To test the configuration, perform the action you selected for the input or output channel.

If the channel is configured correctly, the Status for the channel changes to High.

#### Configuring the Adapter on a Helm Control

- 1 Select **Menu > Setup > NMEA 2000 Devices**.
- 2 Select the GNA 10 adapter.
- 3 Select **Configuration**
- 4 Select the input or output channel you want to configure, and select **Action**.
- 5 Select an action for the input or output wire (*Adapter Configuration Options, page 2*).
- 6 To test the configuration, select the input or output channel and select **Information**.
- 7 Perform the action you selected for the input or output channel.

If the channel is configured correctly, the Status for the channel changes to High.

#### Adapter Configuration Options

The options available for the GNA 10 adapter are different for input and output wires.

**NOTE:** You can install only one jog lever per GNA 10 adapter. If you set a channel to Jog Lever Port or Jog Lever Starboard, you cannot set another channel on the adapter to the same action.

**No Action (input and output):** Sets the channel so that it does not send or receive any signals.

**Jog Lever Port (input):** Sets the channel to receive a port-steering signal from a jog lever.

**Jog Lever Starboard (input):** Sets the channel to receive a starboard-steering signal from a jog lever.

**Autopilot Heading Hold/Standby (input):** Sets the channel to receive a signal to toggle the autopilot between heading hold and standby. You can specify the type of signal switch as either momentary or latching.

**Momntry:** Should be selected for a type of switch, typically in the form of a push button, that engages only when the switch is pressed, and disengages when the switch is released.

**Latching:** Should be selected for a type of switch that toggles between two positions, like a light switch. When the switch is moved to the closed position, the input action is activated until the switch is moved back to the open position.

**Autopilot Standby (input):** Sets the channel to receive a signal to place the autopilot into standby.

**Autopilot Engage Status (output):** Sets the channel to output a signal indicating that the autopilot is engaged.

### Connection and Configuration Examples

#### Jog Lever Connection Examples

You can use these tables for reference when connecting a jog lever to the autopilot system. In addition to the recommended jog lever models, generic connection examples are also provided, but Garmin cannot guarantee compatibility with a jog lever other than the recommended models.

#### Jastram JO100-1/JO300-1 and Kobelt 7170

Wires from Jog Lever	Wires on GNA 10 (Harness A)	Configuration Options
Black	Brown	Input 1 Jog Lever Port
White	Yellow	Input 2 Jog Lever Starboard
Green (common)	Black (common)	N/A

## Simrad S35

Wires from Jog Lever	Wires on GNA 10 (Harness A)	Configuration Options
Pink and gray	Brown	Input 1 Jog Lever Port
Brown and white	Yellow	Input 2 Jog Lever Starboard
Yellow	Green	Output 5 Autopilot Engage Status
Green (common/ground)	Black (common)	N/A

## Generic Jog Lever

Wires from Jog Lever	Wires on GNA 10 (Harness A)	Configuration Options
Steer port	Brown	Input 1 Jog Lever Port
Steer starboard	Yellow	Input 2 Jog Lever Starboard
Common	Black	N/A

## Switch and Indicator Connection Examples

You can use these tables for reference when connecting a switch or an indicator to the autopilot system.

### Autopilot Engage/Standby Button

Wires from Button or Switch	Wires on GNA 10 (Harness A)	Configuration Options
Positive (+) if specified Negative (-) if specified	Blue (+) Black (-)	Input 3 Autopilot Heading Hold/Standby (Momentary or Latching)

### Autopilot Engaged Status Light

Wires from Indicator Light	Wires on GNA 10 (Harness A)	Configuration Options
Positive (+) Negative (-)	Violet (+) Green (-)	Output 5 Autopilot Engage Status

## Specifications

Specification	Measurement
Housing dimensions (L x W x H)	135 x 37 x 39 mm (5.3 x 1.5 x 1.54 in.)
NMEA 2000 cable length	35 cm (13.45 in.)
Wiring harness length	2.5 m (8.2 ft.)
Weight	600 g (21.2 oz.)
Temperature range	From -15° to 70°C (from 5° to 158°F)
Material	Fully gasketed, high-impact plastic
Water resistance	IEC 60529 IPX7 <sup>1</sup>
NMEA 2000 input voltage	From 9 to 32 Vdc
NMEA 2000 LEN @ 9 Vdc	5 (250 mA)
Compass-safe distance	Negligible

## Limited Warranty

The Garmin standard limited warranty applies to this accessory. For more information, go to [www.garmin.com/support/warranty](http://www.garmin.com/support/warranty).

## Innovation, Science and Economic Development Canada Compliance

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is

<sup>1</sup> The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to [www.garmin.com/waterrating](http://www.garmin.com/waterrating).

subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Declaration of Conformity

Hereby, Garmin declares that this product is in compliance with the Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: [garmin.com/compliance](http://garmin.com/compliance).

© 2020 Garmin Ltd. or its subsidiaries

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. GNA™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Jastram™ is a trademark of Jastram Engineering Ltd. Kobelt™ is a trademark of Kobelt Manufacturing Co. Ltd. NMEA®, NMEA 2000®, and the NMEA 2000 logo are trademarks of the National Marine Electronics Association. Simrad™ is a trademark of Simrad Yachting.

